

FITTING INSTRUCTIONS FOR FENDER FLARES 07-11 CHEVY SILVERADO STD, LONG & SHORT BED

PLEASE READ THESE INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

Important Note: Please inspect your fender flares for proper fit before painting or mounting

Parts

Qty (1) Fender Flare Left Front (LF)
Qty (1) Fender Flare Left Rear (LR)
Qty (1) Fender Flare Right Front (RF)
Qty (1) Fender Flare Right Rear (RR)

Qty (1) Rubber Seal (enough for four flares's outer edge)
Qty (10) Push-In Clips
Qty (4) U-Clip with Screws
Qty (8) Self Tapping Screws (see **option B**)

Tools Required:

1/8" Diameter Drill Bits / Phillip Screw Driver


Fender Flare Installation

Pre-Installation



Prefit both driver side and passenger side fender flares to the vehicle before painting or installation. You may remove any moldings, strips or existing flares from the vehicle for fitting or installation. You can cut the fender flare to fit any body side molding.

Painting (optional)

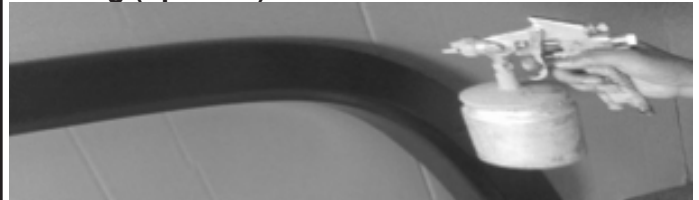

Professional paint or body shop recommended to paint flares. Follow all the paint manufacture specifications to paint the flares. Clean fender flare surfaces with clean water and a mild detergent before painting, do not use lacquer thinner or any solvent based products.

Cleaning



Wash and wipe dry the areas of contact on the vehicle body. Clean the surface and inside edge of the fender flare where the rubber seal is to be attached.

Apply Rubber Seal



Remove about 1 inch of tape liner from rubber seal and apply it to the flare. Start at one end of the flare along the edge that comes in contact with the body panel. Apply pressure on the tape to ensure adhesion, and trim excess rubber seal at the end.

Step 5. Installation



Use a 1/8" diameter drill bit or the provided self tapping screws and attach the flare at the various points.
(The factory screws interfere the fitting without using the plastic washers, you may remove the factory screws and attach the fender without using the plastic washers.)

Step 6. Installation (If plastic washers have been used)

Pulling the vinyl backing free & apply firm pressure to obtain a good adhesion. Do not wash the vehicle until after 24 hours.

Option B: If condition of fender prevents use of Expanding Fastener you can use the included self tapping screws to secure the flare to the fender.